




VMETOCI ZA O[TETENI NAVOI


PODOBRA RASPREDELBA NA OPTOVARUVAVETO

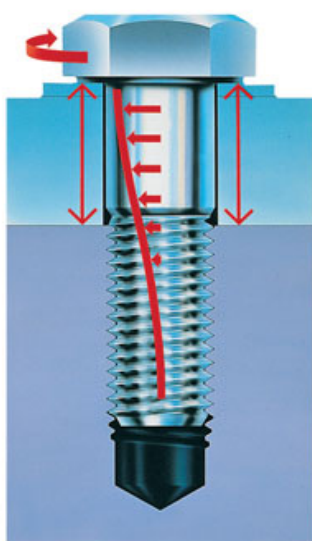

BEZ NAVOEN VMETOK



SO NAVOEN VMETOK

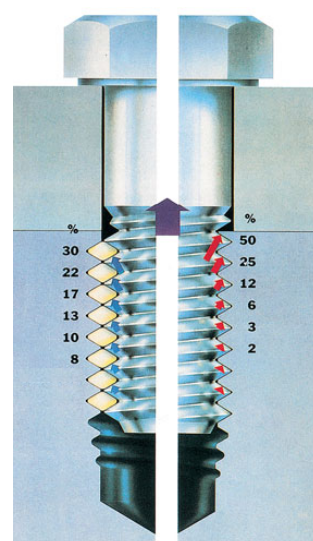

LESNA I BRZA MONTA@A

PODGOTOVKA ZA MONTA@A



DUP^EWE



RE@EWE NA NAVOJ



MESTEWE NA VMETOKOT



NAVRTUVAWE

DI MENZI I NA BURGI I TE ZA NAJKORI STENI TE VMETOCI

Za navoen vmetok (M)	Dimenzija na burgiija (Ømm)
M4	4,2
M5	5,2
M6	6,3
M8	8,3 (8,4)
M10	10,4 (10,5)
M12	12,4 (12,5)
M14	14,5
M16	16,5

Za navoen vmetok (M)	Dimenzija na burgiija (Ømm)
M10 x 1	10,3
M10 x 1,25	10,3
M12 x 1,25	12,3
M12 x 1,5	12,4 (12,5)
M14 x 1,25	14,4
M14 x 1,5	14,5
M16 x 1,5	16,5